



Philips Egg Cooker 3000 Series  
Perfectly cooked eggs,  
every day

Different cooking levels

Family size  
400 W power  
Poached accessory



HD9137/91

## Perfectly cooked eggs, every day

Eggs cooked the way you enjoy them. Soft, medium, hard boiled and poached eggs cooked to perfection. With enough capacity for the whole family, its compact, practical design is also easy to clean and doesn't take up much space.

### Perfectly cook all types of eggs

- Precise results measuring cup with water level markings
- 400W of cooking power
- Ready' signal tone

### Energy saving

- Save up to 70% energy with the egg cooker

### Family sized

- Family sized with six-egg capacity

### Accessories for expert results

- Poached egg tray additional accessory for up to 3 eggs
- Egg piercer and beaker accessory for expert results

### Compact and practical design

- Compact, easy to store design fits all accessories within
- On' light

# PHILIPS

Perfectly cooked eggs, every day  
Different cooking levels Family size, 400 W power, Poached accessory

HD9137/91

# Highlights

## Precise results measuring cup



Cooking the perfect egg is a precise balance of water, power and time. Depending on the type of egg you're preparing, you'll need to add a different amount of water. This measuring cup specifies the different water level markings for best results.

## Family sized



Serve the whole family by cooking up to six boiled eggs or three poached eggs at a time.

## 400W power



The egg cooker's high 400W power ensures perfect results, every time for all types of eggs.

## Poached egg tray accessory



The egg cooker comes with a poached egg accessory tray. Easy to use and clean, simply slot on the tray to come up to 3 delicious poached eggs at the same time.

## Egg piercer accessory



Boiled eggs need to be pierced before cooking to ensure they don't burst. The egg cooker includes an egg piercer. It's housed inside a hand beaker for ease of use and to capture any spills.

## Compact, easy to store design



Designed to minimize clutter and lost accessories, the egg cooker is small and compact and able to store all accessories (measuring up, poaching tray, egg piercer and beaker) within it.

## On' light



It's all in the details. The elegant 'on' light shows when the egg cooker is switched on.

## Easy to clean



No fuss or mess eggs. The egg tray and poached egg tray accessory are both removeable, easy to clean and can be cleaned in the dishwasher for ultimate ease.

## Ready' signal



The 'ready' signal tone gives a short bleep to indicate that cooking is finished and your eggs are ready.

## Save up to 70% energy with the egg cooker

The egg cooker makes sure that you boil the right amount of water for cooking your eggs, saving both energy (up to 70% compared to an induction cooker) and water.

Perfectly cooked eggs, every day  
Different cooking levels Family size, 400 W power, Poached accessory

HD9137/91

# Specifications

## Technical specifications

- Voltage: 220-240 V
- Wattage: 400 W
- Accepted Voltage Frequency: 50/60 Hz
- Are batteries required?: No
- Contains liquid contents?: No

## Weight and dimensions

- Weight appliance: 0.56 kg
- Product dimensions (L x W xH): 18.5 x 14 x 13.4 cm
- Packaging dimensions (L x W x H): 23 x 16.6 x 15.4

cm

- Packaging weight: 0.8 kg

## Design and finishing

- Color(s): Deep Black

## Country of Origin

- Made in: China

## Service

- 2-year worldwide guarantee



Issue date 2024-02-16

Version: 7.7.1

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)