



5KTBW



KitchenAid







BUN WARMER INSTRUCTIONS

For use with the Artisan Toasters (5KMT2204 and 5KMT4205)

The Bun Warmer will quickly warm buns and rolls – without tying up an oven. An insulated handle keeps the warmer comfortable to use.

Using your Bun Warmer

Fit Bun Warmer on top of toaster, then place the buns on top of the Bun Warmer.

1. Choose the toasting level from 1 to 7 according to the desired result, and press the TOAST/CANCEL button once. A signal will beep once at the end of the cycle.



Bun Warmer tips:

- For more thorough warming, slice the bun and place both halves on the Bun Warmer.
- Two Bun Warmers can be used side-by-side on the 4-slice toaster.

NOTE: Bun Warmer becomes VERY HOT during the warming cycle, always use the handle to manipulate it after a warming cycle.

Care and cleaning

- The Bun Warmer is dishwasher safe.
- If washing by hand, avoid the use of abrasive cleaners or scouring pads.
- Dry thoroughly after washing.

Warranty

Warranty: 2 years full warranty from the date of purchase.

For all product related questions and after-sales matters, please refer to the Use and Care Guide provided with your Toaster.



KitchenAid

© 2013. All rights reserved.
Specifications subject to change without notice.

W10507132A

01/13

