



5KTSR1



KitchenAid







SANDWICH RACK INSTRUCTIONS

For use with the Artisan Toasters (5KMT2204 and 5KMT4205)

Toast sandwiches made with thinly sliced meats and cheese. Always use the Sandwich Rack in combination with the SANDWICH button featured on your toaster control panel.

English

Preparing your sandwich

NOTE: Sandwich Rack becomes VERY HOT during the toasting cycle, always use the handle to manipulate it after a toasting cycle

1. Lightly butter the outside of the sandwich bread – do not butter the side that will face the filling. Buttering the outside of the bread will slow browning and help warm the filling.
2. Fill the sandwich with desired ingredients, but do not overfill it. Thinly sliced ingredients – like ham, turkey, and cheese – work best.
3. Open the Sandwich Rack by spreading the handles apart. Then, place an edge of your

sandwich flush with the bottom channel of the rack, as shown.

 
4. Press the Sandwich Rack handles together to grip the sandwich. Close the clip to keep grids together.

NOTE: Do **NOT** toast sandwiches without the Sandwich Rack, because cheese or other food could melt and stick to the interior of the toaster.




Do **NOT** store your Sandwich Rack in the toaster, or place it back in the toaster once sandwich is toasted and unloaded. This would start a new toasting cycle and prevent toaster from working properly.

Toasting your sandwich

1. Set the Shade Control to the desired level of brownness, then press the SANDWICH button.
2. Insert the Sandwich Rack into the toaster slot, with your sandwich inside, as shown. The toaster will automatically lower the Sandwich Rack and start toasting.
3. When the sandwich is ready, a signal will beep 3 times, and the Sandwich button light will blink.

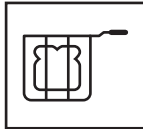

   4. Remove Sandwich Rack and press either the SANDWICH button or the TOAST/CANCEL button to return the carriage to its proper position. If Sandwich Rack is not removed, a signal will beep every 30 seconds for 2 minutes and the Sandwich button light will blink to remind you to remove it. If the Sandwich Rack is not removed within 2 minutes, the toaster will automatically turn off. In any case, the Sandwich Rack must be removed to operate toaster again.

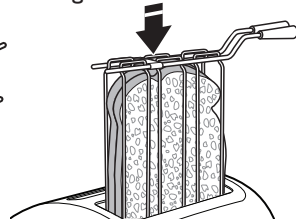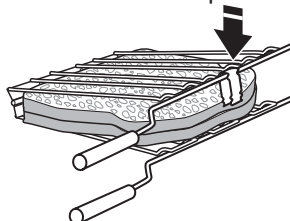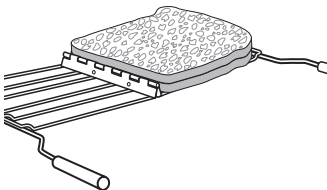

Care and cleaning

- The Sandwich Rack is dishwasher safe.
- If washing by hand, avoid the use of abrasive cleaners or scouring pads.
- Dry thoroughly after washing.

Warranty

2 years full warranty from the date of purchase.

For all product related questions and after-sales matters, please refer to the Use and Care Guide provided with your Toaster.





KitchenAid

© 2013. All rights reserved.
Specifications subject to change without notice.

W10507131A

01/13

